 


DESCRIPTION: #90-4330

The low voltage Mini Mist Timer displays the environment status and provides precision accuracy of time and temperature settings to suit the preferences of individual users.

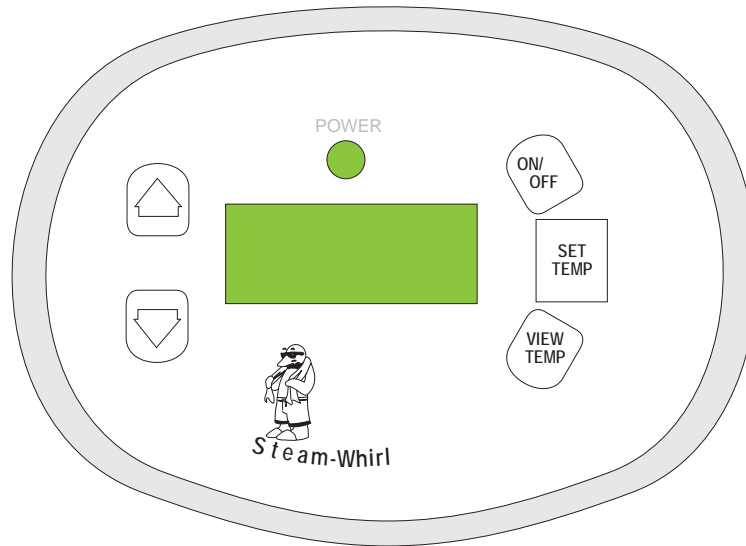

IMPORTANT

- ✓ **TIMER MUST BE INSTALLED INSIDE STEAM ROOM**
- ✓ **WATER WILL DAMAGE ELECTRONICS**
- ✓ **FOLLOW THE INSTRUCTIONS EXACTLY**

A. TIMER

1. The Mini Mist Digital Timer requires 1-3/8" mounting hole.
2. Connect the supplied modular telephone cable to the RJ11 jack on the back of the Mini Mist Digital Timer and to the RJ11 jack on the outside of the Mini Mist unit above Wiring Junction Box.
3. Press ON button, the Mini Mist Digital Timer display window will show the value of 60 minutes. Every minute thereafter, it will decrease and display the updated amount of time remaining.
4. At any time while the Mini Mist Digital Timer displays the time, the user may adjust the time remaining anywhere from 1 to 90 minutes, by using the up and down arrow icons. The timer will then count down from the new value, each minute, as before.

B. TEMPERATURE

1. At any time, the user may press the SET TEMPERATURE button. The 3-digits LED display will then temporarily change to show the temperature setting.
 2. While the display is showing the temperature setting, either of the up and down arrow icons may be pressed so that the temperature setting can be adjusted.
 3. Pressing the up and down arrow icons adjusts the temperature setting by one (1) degree increments from 90 to 120 degrees Fahrenheit.
 4. Repeated pressing of either arrow button or holding one of the buttons down, allows the use to change the setting to the desired temperature. If there is no further pressing of either button, the display will automatically revert back to displaying the current time remaining and the system will bring the steam• Pressing the up and down arrow icons adjusts the temperature setting by one (1) degree increments from 90 to 120 degrees Fahrenheit.
 5. Repeated pressing of either arrow button or holding one of the buttons down, allows the use to change the setting to the desired temperature. If there is no further pressing of either button, the display will automatically revert back to displaying the current time remaining and the system will bring the steam temperature back to the temperature setting.
 6. When power is first supplied to the Mini Mist system or after a power interruption, the initial temperature setting will be 100 degrees Fahrenheit.
 7. As long as the line power is not disconnected, the temperature setting will remain at the last user adjusted value.
- C.** The Mini Mist will shut-off steam when the desired temperature is reached and will automatically resume, if temperature drops below the set point.
- D.** If the Mini Mist is operating properly, peel liner off the back of the timer foam gasket and adhere to the wall.
- E.** **DO NOT** staple cables.

READ AND SAVE THESE INSTRUCTIONS