




DESCRIPTION:

#90-4315

Timer Kit for Standard Series Dual Generator Hook-Up

Includes: 2-12' Cables w/RJ11 Connectors
1-Splitter Plug

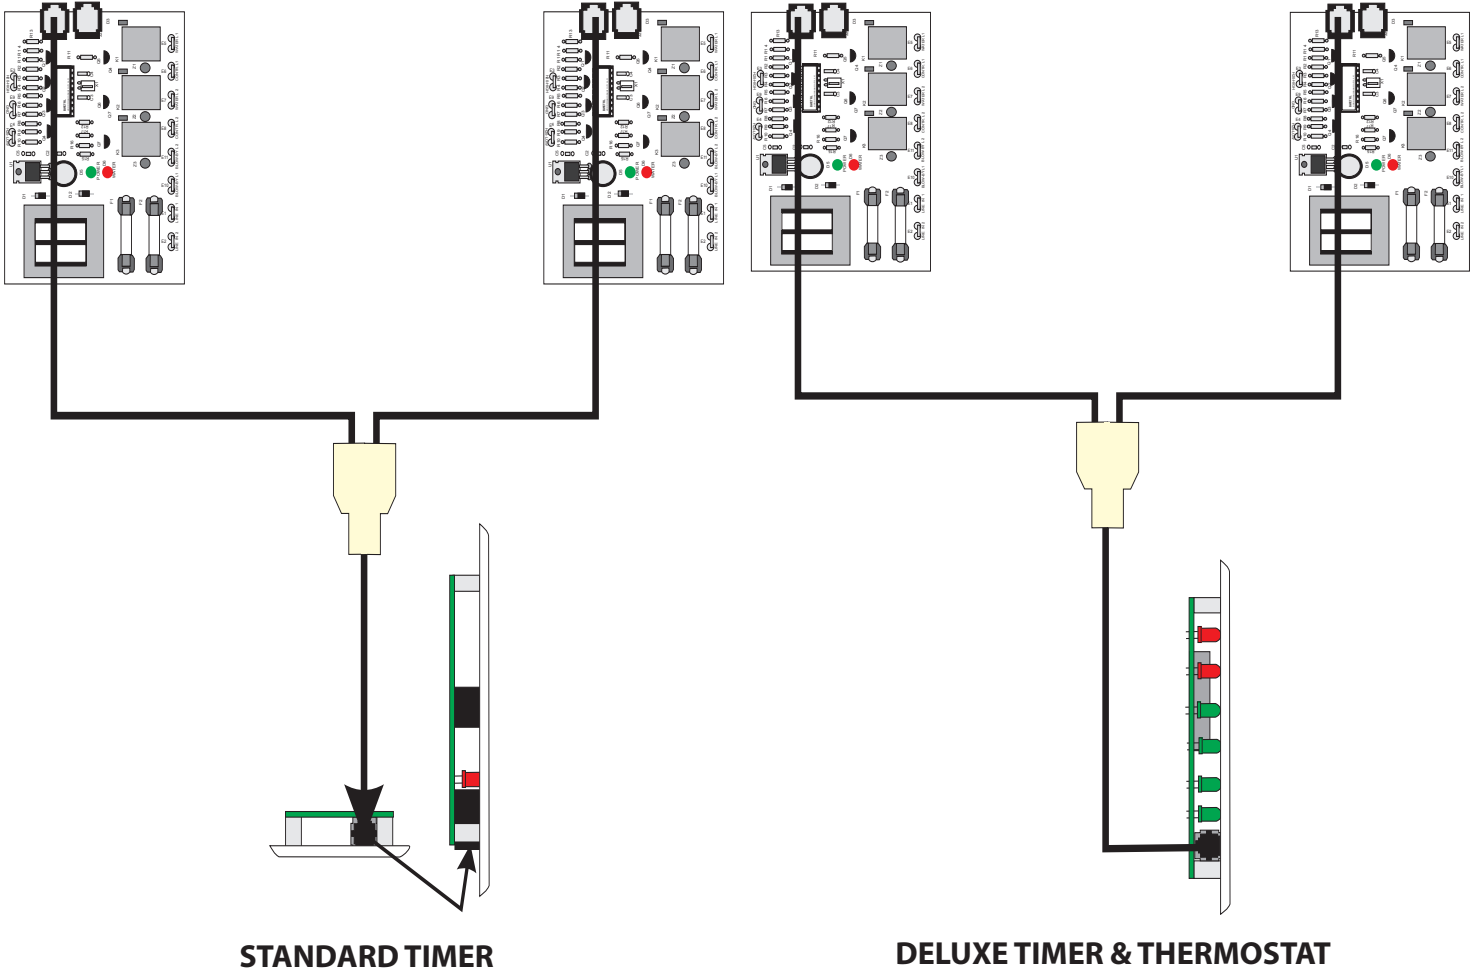

STANDARD TIMER

DELUXE TIMER & THERMOSTAT

IMPORTANT

- ✓ **WATER WILL DAMAGE ELECTRONICS**
- ✓ **FOLLOW THE INSTRUCTIONS EXACTLY**

1. Follow the Timer Installation Instructions provided with Timer.
2. Using Timer Kit for Dual Generator, connect one end of 12' cable with connectors to controller PCB in Unit 1 and the other end to one side of splitter plug; then connect second 12' cable with connectors to controller PCB in Unit 2 and the other end to the second side of splitter plug.
3. Connect one side of the supplied 25' timer cable with connectors to the back of the timer and the other end to the front of the splitter plug.
4. **DO NOT** staple cables.

READ AND SAVE THESE INSTRUCTIONS